

700mm Built-In Ceramic Cooktop Manual

MODEL

CK70

 **HOME APPLIANCES**

Installation and Operation

USE, INSTALLATION AND MAINTENANCE INSTRUCTIONS FOR ELECTRICAL BUILT-IN HOT PLATES

Dear User,

we are sincerely grateful to you for purchasing one of our products.


We are sure that the appliance modern, functional and easy to use, built with the finest materials and components will satisfy all your needs.

We would ask that you read the instructions within this booklet very carefully so as to enable you to obtain quality results from the outlets.

The appliance must be installed only by a qualified electrician in compliance with the instructions provided. The manufacturer declines all responsibility for improper installation.

DESCRIPTION OF THE HOT PLATES

CK70 model

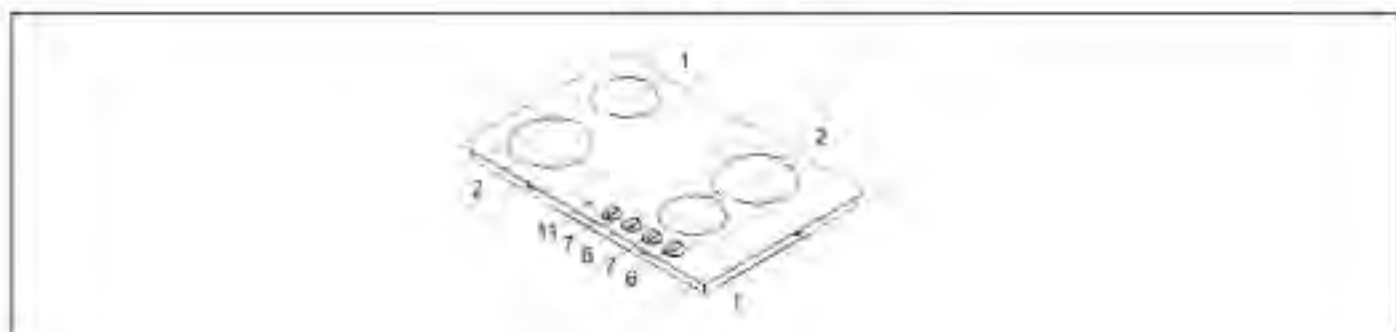

- | | |
|--|-----------|
| 1 Radiant electric heating element "Hi-light" Ø 145 mm | of 1200 W |
| 2 Radiant electric heating element "Hi-light" Ø 180 mm | of 1800 W |
| 6 Control knob for heating element n. 1 | |
| 7 Control knob for heating element n. 2 | |
| 11 Residual heat indicator | |

1) ELECTRIC GLASS CERAMIC HOB

The hot plates are equipped with 4 radiant heating elements with different powers and diameters.

Cooking zones are easily identified thanks to the circle markings (see illustration in description) on the top; relative powers are listed in the scheme n. 1. On the frontal panel, close to each knob, has been silk-screened a scheme where is indicated to which cooking zone the knob refers (fig. 1).

The scheme annexes a light indicator that turns on when the cooking zone temperature is above 60° C (see fig. 1).

The indicator will turn off only when the temperature of the cooking zone will be below the value: this is the reason why we call it residual heat indicator.

Connection of electric heating elements

Heating elements are controlled by energy regulators with 6 positions (see fig. 1) that permit to obtain a big range of different temperatures. In Scheme 1, by way of information, we give instructions to obtain different cooking levels.


To connect the heating elements is necessary to turn clockwise or anticlockwise the it elements relative knob. Indicator light 11 shows the connection of one or more heating elements.

To connect the heating elements with double cooking zone is necessary to turn clockwise the knob mapped in fig. 1 and stop in position "0".

To diminish from position 6 to position 2, insert one cooking zone only.

How to use the cooking zones

Heating takes place only in the inside part of the circles drawn on the special glass. The circles have to be wholly covered by the pots.

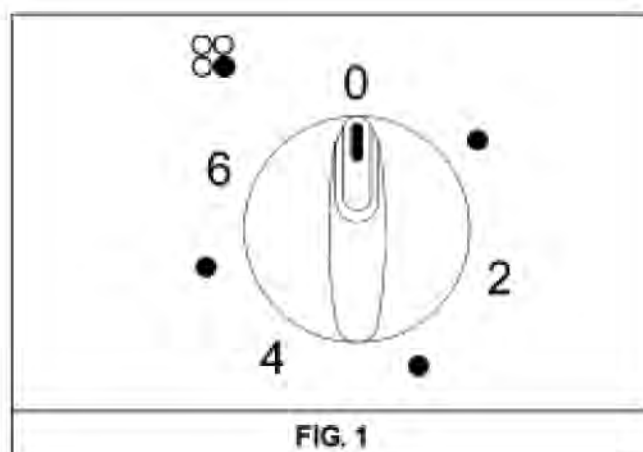

USE

TABLE 1

Power and dimensions of the cooking zones				Position for regulation of the knobs	Possible cookings
Zone n°	Diameter in mm.	Heating elements	Power W	Commutators	
1	145	Radiant "Hi-light"	1200	1	To melt butter and chocolate
2	180	Radiant "Hi-light"	1800	1 - 2	To heat small quantities of liquid and to keep dishes warm.
				2 - 3	To heat foods, thaw deep-frozen foods, to cook fruits and pulses.
				3 - 4	To cook meat, fish, pulses with sauce.
				4 - 6	To cook roast of meat, fish; to cook steaks and eggs.
				6	To fry with oil and to heat big quantities of water.


USE

WARNINGS:

For a correct use, please look at fig. 2 and remind:

- Switch on the electricity only after having placed the pot on the cooking zone.
- Use pots and pans with flat solid bottoms.
- Use pots with the same diameter of the cooking zones.
- Dry the bottom of the pot before put in on the cooking zones.
- Do not scrape the pot against the glass so to not damage it.
- During the use of the cooking zones, please, keep the children away from the hot plates. Make sure that the handles of the pots are placed in the right way towards the interior. Be aware that overheated fats and oils may become inflamed.

- Cooking zones after using remain warm; don't leave objects, don't lean your hands so to avoid burns, till the indicator light is off.
- If the glass cracks, please, disconnect the appliance.
- Don't use plastic pots or aluminium sheets.
- Don't use hob as a supplementary surface.
- It is recommended not to use pots and pans with an aluminium or copper base directly on the ceramic cooktop surface unless sandwiched by a stainless steel layer. Use of pots and pans with these materials can cause pitting of the ceramic surface. If pitting does occur there will be no affect to the cooktop operation.

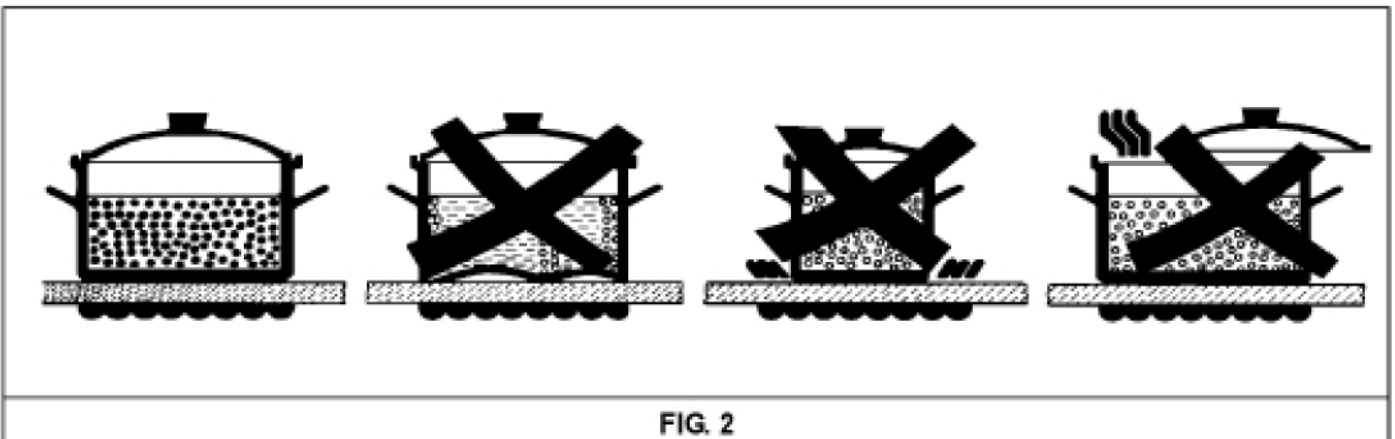

CLEANING

Before any cleaning operation, disconnect the appliance from the electric circuit.

2) ELECTRIC GLASS CERAMIC HOB

If you want to preserve the surface clean and bright, we recommend you to use a silicone conditioner. The use of these conditioners, prior to jam-making, helps protect the surface of the hob.

It is very important to clean the surface soon after every use, when the glass is still tepid.



Do not use metallic sponges, powder abrasives or corrosive sprays.

Depending on the dirty level we recommend:

- Slight stains: it is enough to use of a moist clean rag.
- Burnt or soiling may be removed with a special

razor scraper (fig. 4); **be aware that the razor can cause wounds.**

- Marks of liquid, from the pot, can be removed using vinegar or lemon.
- **Pay attention to not allow sugar spills to occur on elements and ceramic glass surface. In this case turn the switch off and clean the surface with hot water and the razor blade scraper.**
- After a period of time may appear metal reflex and scratches (fig. 4) due to the wrong cleaning and the wrong use of the pots. The scratches are difficultly removable, but they do not compromise the good working of the hob.
- Don't use steam jets for the equipment cleaning.

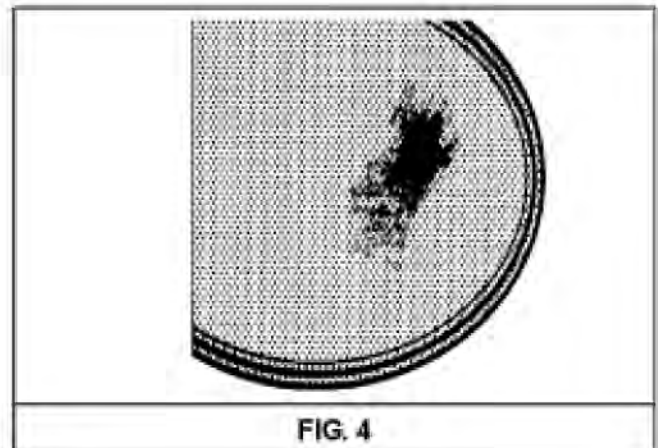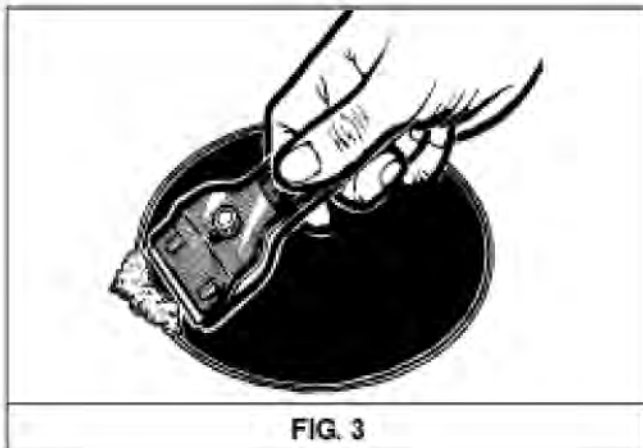

INSTALLATION

TECHNICAL INSTRUCTIONS FOR THE INSTALLER

Installation, transformations and maintenances below listed, may only be carried out by a competent technician.

A wrong installation may provoke damages to persons, animals or things, for which the builder can not be responsible.

During the life of the unit, the automatic safety or regulating devices on the appliance may only be modified by the manufacturer or by his duly authorized dealer.

3) INSERTING

After having cleared out all the packing components, make sure of the integrity of the appliance. In case of doubt, do not use the appliance and contact qualified personnel.

Please keep children away from all packing elements (carton, polystyrene, nails,..).

Make a cutout in the worktop, according to the dimensions indicated in fig. 5, make sure that will be respected the critical dimensions between the hob, the lateral walls, the back and the superior walls (see fig. 5 and 6).

INSTALLATION

COMPLY WITH THE DIMENSIONS (in mm)

MODEL	Overall dimensions of hob		Cut out dimensions of kitchen unit	
	A in mm	B in mm	C in mm ($^{+0}_{-0.5}$)	D in mm ($^{+0}_{-0.5}$)
CK70	510	700	486	560

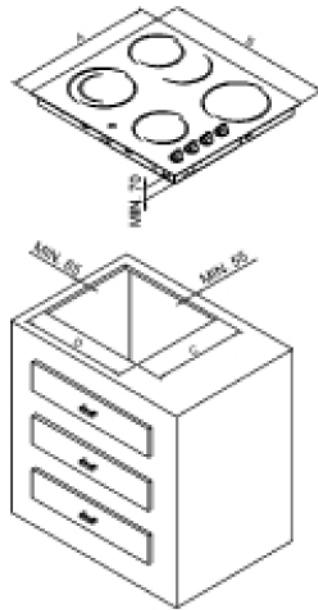


FIG. 5

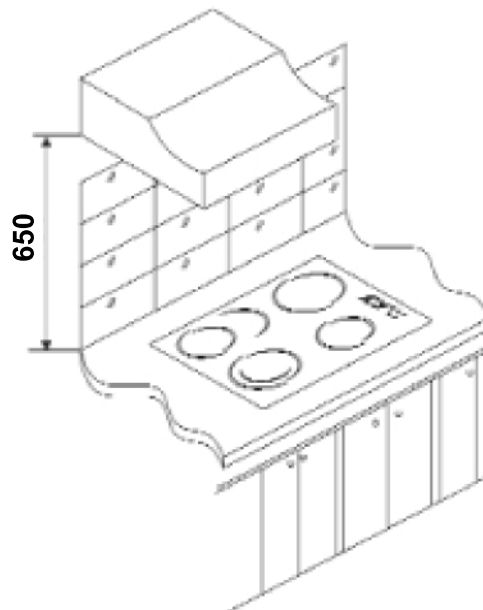


FIG. 6

INSTALLATION

4) FIXING

Use the special sealing strip underneath the hob reduce risk of damage.

Make sure it is correctly positioned with no gaps; it avoids any water infiltration. To fix in the right way the strip, please, respect the following instructions:

- Fix the hooks in the relative accommodations of the body with the screws "F" (see fig. 7 - 10).
- Overturn the hob, take the seal strips off from their support, having care that the transparent protection remains attached to the seal. Correctly place the seal "E" (fig. 8) under the hob edge, so that the external side of the seal fits together with the external perimetric edge of the hob. The ends of the strip must fit together without overlapping.
- Stick the seal to the hotplate uniformly, pressing it with fingers.
- Take the protective paper strip of the seal off, place the hotplate in the opening made in the

bench top, and fix it with the special screws "F"(fig. 9).

- Re-word 'In order to avoid accidental touching the bottom of the hob, during operation, it is necessary to install a wooden barrier, fixed by screws, at a minimum distance of 25mm from the base of the cooktop (see fig.11)

Note: a wooden barrier is not required when the cooktop is installed above an oven.

WARNINGS:

Be aware that the glue that join the laminated plastic to the furniture, has to resist to temperature not below 150° C, to avoid the unstuck of the panelling.

The installer should bear in mind that the mixed appliance is the Y type. The rear wall, adjacent and surrounding surfaces must therefore be able to withstand an overtemperature of 75 K.

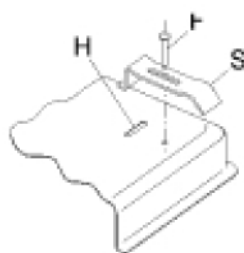


FIG. 7



FIG. 8

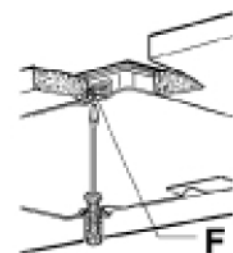


FIG. 9

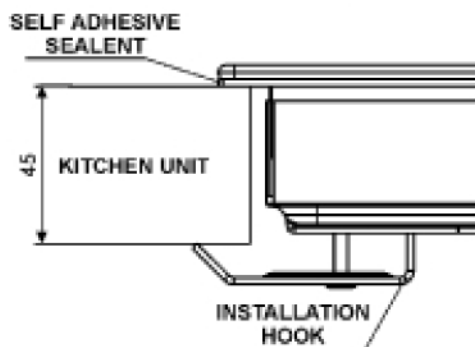


FIG. 10

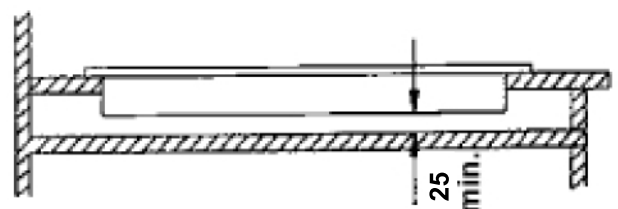


FIG. 11

INSTALLATION

5) ELECTRICAL CONNECTION

The electrical connection has to be done in accordance with all electrical and installation requirements of the Regulation.

Before proceeding with the connection, please, verify that:

- The power of the electrical system and the power of the outlets is adequate to the maximum power of the appliance (see the identification label in the lower part of the body).
- The outlets and all the electrical system has an efficient connection to the "earth" according with the Regulation. We disclaim all responsibilities for not observing such points.
- If the appliance is not equipped with an input cable, connect to the clamp with an adequate section cable (see table paragraph 5) keeping the "earth" conductor longer than "live" ones, following the scheme of fig. 12 and 13.

When the connection to the input system has been done through a outlet:

- Apply to the input cable, if unprovided, a normalized plug adequate to the load indicated in the identification label. Connect the cables according to the scheme of fig.12, making sure to respect the undermentioned responses:

Letter L (live) = cable brown colour;

Letter N (Neutral) = cable blue colour;

Symbol \oplus (Earth) = cable green - yellow colour.

Our hobs can also operate with three phase power carry out the relative responses. Connect the cables according to the scheme of fig.13, making sure to respect the undermentioned responses:

Letter L₁ (live) = cable brown colour;

Letter L₂ (live) = cable black colour;

Letter L₃ (live) = cable black colour;

Letter N (Neutral) = cable blue colour;

Symbol \oplus (Earth) = cable green - yellow colour.

- The input cable has to be located so that never reach the over temperature of 75 K.
- Please do not use in the connection any reduction, adaptation that may provoke a false contact with following dangerous overheatings.
- The outlet must be accessible after the built-in.

When the connection has been done directly to the input system:

- Interpose between the appliance and the system an onnipolar switch, adequate to the load of the appliance, with a minimum nose between the contacts of 3 mm.
- Keep in mind that the "earth" cable does not have to be interrupted by the switch.
- In an alternative solution the electrical connection can also be protected by a differential switch with high sensitivity.



We recommend to fix the earth coloured cable to an appropriate earth installation.

WARNINGS:

All our products are projected and built according with the European Norms EN 60 335-1 and EN 60 335-2-6 and relative amendments.

The appliance has been produced according with the European Directives:

- CEE 89/336 + 92/31 + 93/68 concerning the compatibility electromagnetic.
- CEE 73/23 + 93/68 concerning the electrical security.

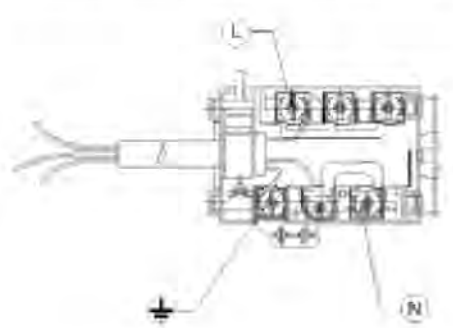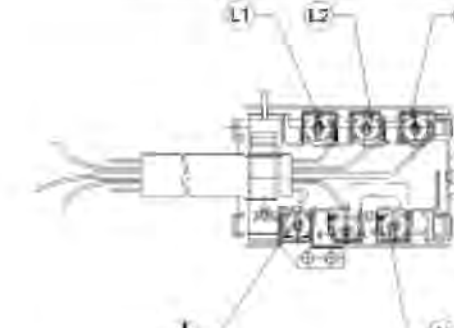SINGLE PHASE POWER	THREE PHASE POWER
	
FIG. 12	FIG. 13

TRANSFORMATIONS

Before any kind of transformation is necessary to cut off the electricity.

6) TRANSFORMATION OF THE INPUT TYPE

The standard equipment of the appliances is for single phase connection. In any case, under proper changes, they can be fed with a three phase system. To obtain these changes, please, follow the instructions:

a) Take the cupboard making pressure on the sides clamp as indicate in the figure stamped on the cupboard (see fig. 14).

b) Remove the connection jumpers on the clamp following the scheme of fig.15 (attached on the body).

c) Insert the input cable with adequate section (see scheme paragraph 5) into the chock.

d) Connect the phase cable into the clamp and the "earth" cable in the relative clamp.

e) Hold up the input cable with the pertinent stopcable.

f) Close the cupboard again and press until the closing tum.

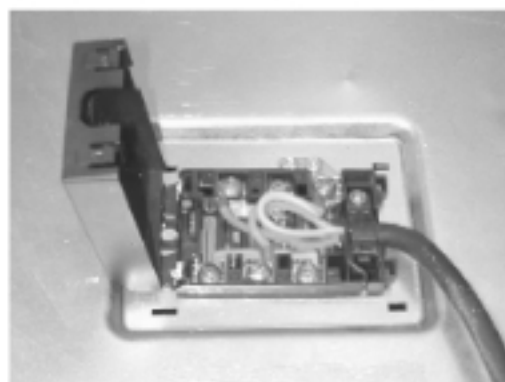


FIG.14

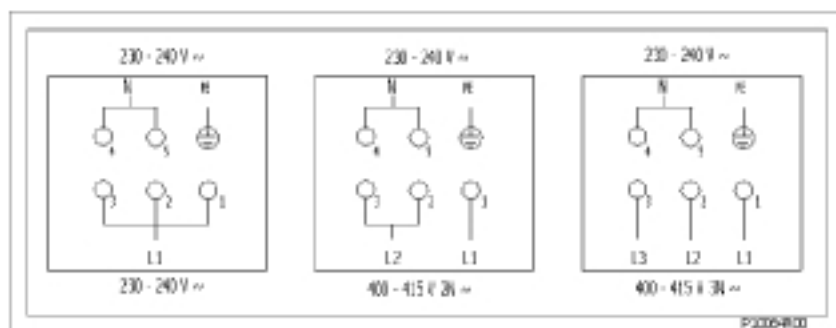


FIG. 15

MAINTENANCE

Before doing any action, disconnect the appliance from the input power.

7) COMPONENTS SUBSTITUTION

To replace the components lodged in the internal part, is necessary to take the appliance up from the furniture, overturn it, loosen the screws and take away the bottom.

After these actions is possible to work on the plates, commutators and clamps.

For the maintenance of the cable it's necessary overturn the hob.

In case of substitution of the input cable, the installer must keep the "earth" conductor longer than "live" ones, and must respect the cautions in paragraph "ELECTRICAL CONNECTION".

To reassemble the appliance repeat the inverse process.

8) TECHNICAL CHARACTERISTICS OF THE ELECTRICAL COMPONENTS

To facilitate the job of the installer we present a table with the characteristics of the components.

POWER OF ELECTRICAL COMPONENTS DENOMINATIONS

Denominations	W
Radiant electric heating element "Hi-light" Ø 145 mm	1200
Radiant electric heating element "Hi-light" Ø 180 mm	1800

TYPE AND SECTION OF THE POWER CABLES

Cable type	Single phase power 230 - 240 V~	Three phase power 400 - 415 V 3N ~	Three phase power 400 - 415 V 2N ~
Rubber H05 RR-F	3 X 2.5 mm ² (*)	5 X 1.5 mm ² (*)	4 X 1.5 mm ² (*)

() keeping in mind the contemporaneousness factor*

TECHNICAL DATA

CK70 Model (4 "Hi-light" heating elements)

Voltage	230 - 240 V~
Frequency	50/60 Hz
Tot. Rating	6000 W

TECHNICAL ASSISTANCE AND SPARE PARTS

This appliance, before leaving the factory, has been carefully tested and regulated by expert and specialized personnel in order to guarantee the best performances.

Any repairs or adjustments which may be subsequently required may only be carried out by qualified personnel with the utmost care and attention.

For this reason, always contact your Dealer or your nearest After Sales Centre whenever repairs or adjustments are required, specifying the type of fault and the model of appliance in your possession.

Please also note that genuine spare parts are only available from our After Sales Service Centres and authorized retail outlets.

The above data are printed on the data label put on the inferior part of the appliance and on the packing label.

WARRANTY INFORMATION

IN ADDITIONS TO RIGHTS BY LAW

Home Appliances Pty Ltd guarantees to the original purchaser in the first two (2) years of ownership that any part with defective material be replaced free of charge, provided that all service work is carried out by Home Appliances Pty Ltd or the nearest appointed service agent.

2 Year Warranty

CERAMIC COOKTOP

Where the appliance is installed outside the normal service area Home Appliances Pty Ltd or its appointed Service Agent, the purchaser will pay the travels cost charges for the service agent to attend the repair or to take the appliance to the service centre.

Built-In and Freestanding Appliances

Access must be granted within normal working hours and our Service Agents must have easy access to these built-in appliances and charges will be the responsibility of the purchaser where the service technician cannot obtain easy access to remove the appliance for inspection prior to repair

The Warranty is not transferable and excludes any repair or replacement caused by Power Surges, faulty installation abuse, Pest damages, misuse, acts of God or accident

The above Warranty is for Domestic Application only and is limited to Three (3) Months in Commercial Applications

AUTHORISED SERVICE AGENTS

NSW

ALL GENERAL WHITEGOODS
SERVICE
4/11 HALLSTROM PLACE
WETHERILL PARK 2164 NSW
PH:02 97561511 FAX:02 97561091

QUEENSLAND

ENDEAVOUR REFRIGERATION

167 ROBERTSON STREET
FORTITUDE VALLEY QLD 4006
PH:073 8727444 FAX:073 8522465

GOLD COAST

ROSHAD APPLIANCE

1/13 LEDA DRIVE
BURLEIGH QLD 4220
PH:0755357044 FAX:0755357407

VIC

MASTER TECH SERVICES
9 KIRKHAM ROAD
DANDENONG VIC 3175
PH: 1300 131118 FAX: 1300366705

WA

DACAPS APPLIANCE PARTS AND SERVICE
357 SEVENOAKS STREET
CANNINGTON WA 6107
PH: 1800 322 277 FAX: 1800 354310

TAS

FARR ELECTRICAL CONTRATOR
286 MACQUAIRE STREET
SOUTH HOBART TAS 7004
PH: 03 6223 1010 FAX 03 62237039

FOR OUTSIDE SERVICE AREAS
PLEASE CONTACT OUR SERVICE & CARE CENTRE AT NEWCASTLE

1/9 TERAN CLOSE
WHITEBRIDGE NSW 2290
PH: 02 49 209114 FAX: 02 49209115

Email: sales@hapl.com.au

Website: www.hapl.com.au